

ART CLAYTM SILVER Basic Instruction Guide #041

Sandal Pendant

Level: Basic/ Intermediate

<Materials>




Completed piece

Art Clay Silver 650/1200 Clay Type	5g
Art Clay Silver 650/1200 Paste Type	A small amount
Art Clay Silver 650/1200 Syringe Type with blue nozzle	A small amount
G-011-2 Synthetic Gemstones/Round 2φ/Aquamarine	1pc
K-001a Round jump ring (small)	1pc
C-068 Bead Chain(SV925) 8-side cuts 40cm	1pc

<Step by Step Guide>



1) Make a design pattern for the sole and heel (see image).

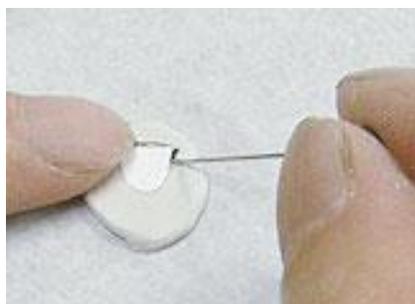

2) Place a pair of 1.5mm thick plastic strips on each side, and roll out a small amount of clay with a mini roller. Then, place the heel pattern on the clay, cut out with a pin and dry completely.



3) Smooth the shape, and file the heel obliquely with a medium fine file.



4) Place a pair of 1mm thick plastic strips each side, roll out the rest of clay with the roller, place the sole pattern on the clay, and cut out with a pin. Then, attach the sole to the heel with a small amount of Paste Type, and dry.



5) After attaching.



6) Cut a 3mm dia. Straw into a U-shape. Cut out the rest of clay in Step 4 into a flower shape (see image).



7) Bend up the tips of the flower petals and dry.



8) Smooth all pieces with the medium fine file and a red sponge sanding pad (#320-600).



9) Fold a memo pad three times, place on the sole, and extrude syringe at random (Keep space on the top for a round jump ring.). Fix the sides with a moistened brush, and dry.



10) After drying.



11) Extrude double dots on the center of the flower with syringe green nozzle.



12) Embed the stone into the center.



13) Paint a small amount of Paste Type on the back of the flower, and attach it on the sandal top. Dry completely, remove the memo pad and fire for 5 minutes at 800C in a kiln.



14) Polish the entire piece with a stainless steel brush, burnish the edges and sides of the flower, and set the chain. Then, finish.